



Co-ax Plug Installation


PL259



Leave plastic boot on end of Co-ax until ready to install plug. This will protect pre-formed termination on end of Co-ax cable during installation of antenna.

Before installing plug, twist centre conductor strands together to allow them to pass easily through the plug's centre pin.

Install Co-ax plug as shown below.

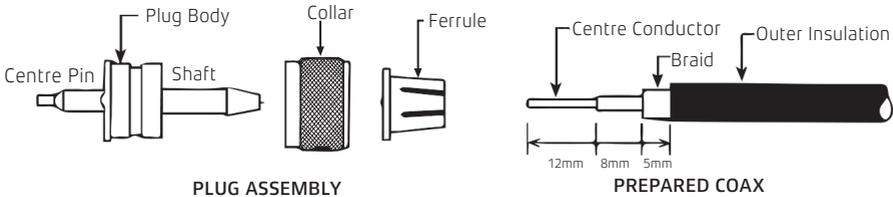


1. Slide Ferrule (a) and Collar (b) over COAX. (Note Orientation)



2. Slide Plug Body over Centre Conductor.




3. Push Plug Body FIRMLY under Braid until fully inserted.

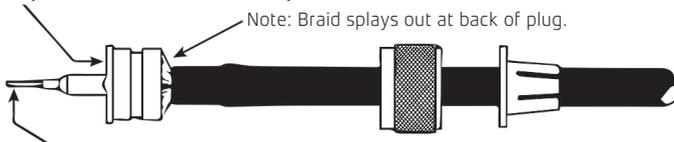

4. Ensure Centre conductor exits cleanly (NO loose or caught strands).

5. Slide Collar back over Plug Body.

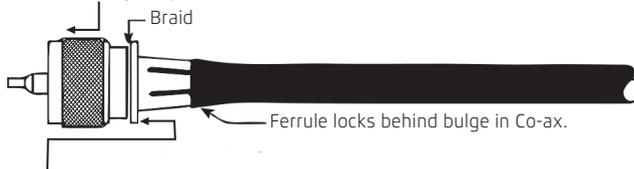

6. Push Ferrule FIRMLY against Plug Body.

7. Solder or Crimp centre pin to Centre Conductor. Remove excess Wire.